


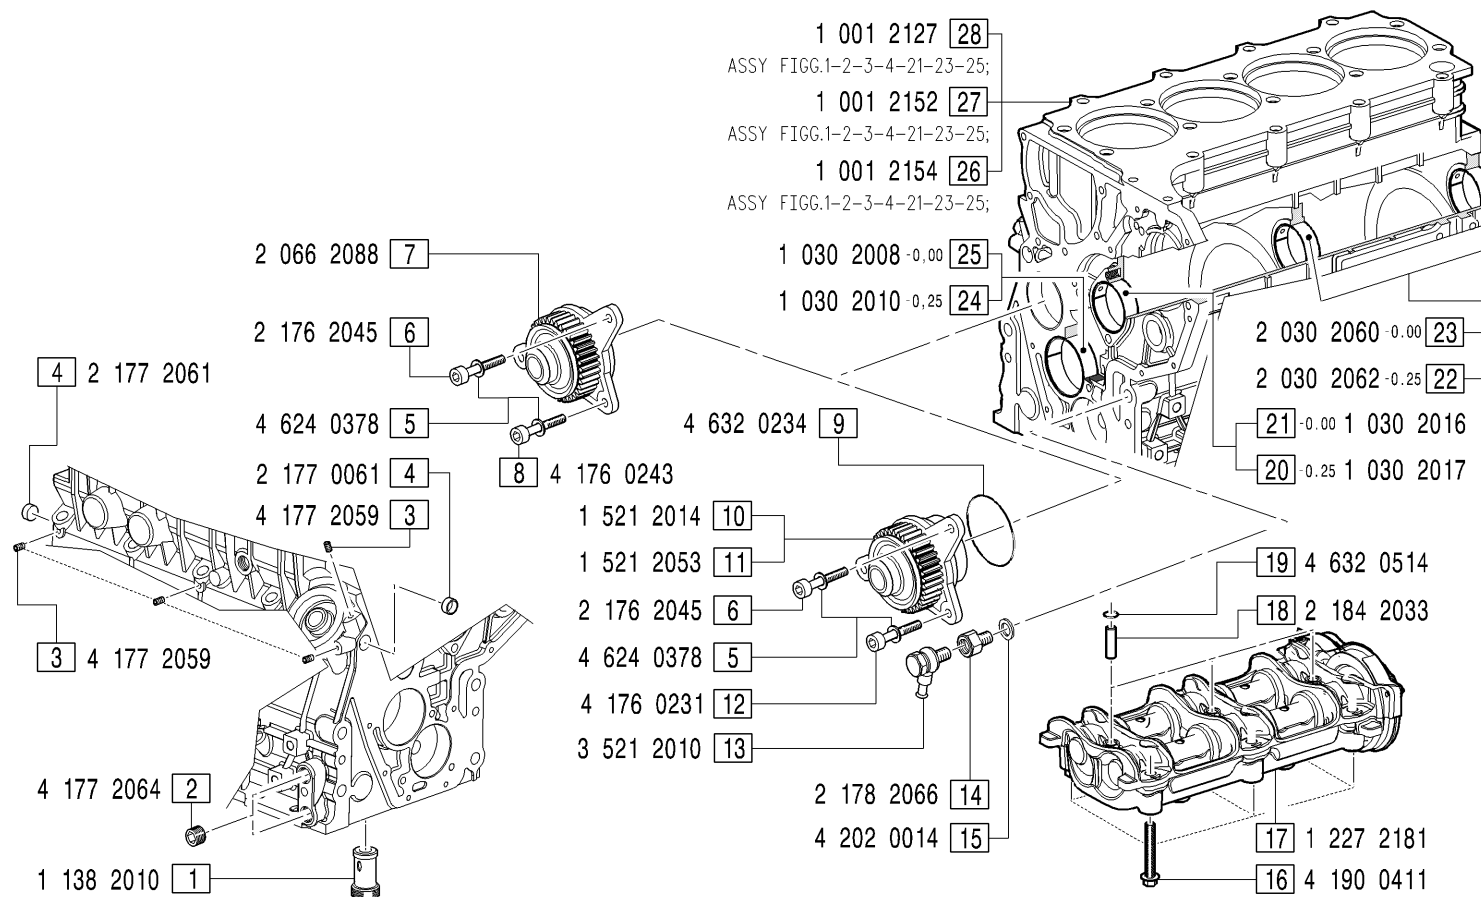

GRUPPI BASAMENTI - Crankcases groups

ADE0006: FIGG.5 6 9 11-12-13-14-15 27-29 32-34 40 41 42 43-44 45 46 47 48 49 50 51-53-54-55-58-64:

ADE0009: FIGG.5-6-9-10-12-13-14-15-27-29-32-34-40-41-42-43-44-45-46-47-48-49-50-51-53-54-55-58-64;

BAS0006: FIGG.5-6-7-8-28-29-32-34-40-41-42-43-44-45-46-47-48-49-50-51-53-54-55-58-64:

BAS0008: FIGG.5-6-7-8-16-17-18-19-26-29-30-35-39-40-41-42-43-44-46-47-48-49-50-51-53-54-55-59-64:

[illegible]

Pos. N.	DESCRIPTION DESCRIZIONE	Quantity (Q.tà)	8	SCREW	2	17	BALANCE SHAFT ASSY	1	26	CRANKCASE ASSY	1
			9	O RING	1	18	DOWEL	3	27	CRANKCASE ASSY	1
1	OIL PRESSURE VALVE	1	10	VACUUM PUMP ASSY	1	19	O RING	3	28	CRANKCASE ASSY	1
2	PLUG	2	11	VACUUM PUMP ASSY	1	20	BEARING ASSY -0,25	1	29	PISTON OIL JET	3
3	PLUG	4	12	SCREW	2	21	BEARING ASSY -0,00	1	30	BEARING +0.00	3
4	PLUG	2	13	ONE WAY VALVE-VAC PUMP	1	22	BEARING -0,25	1	31	BEARING +0.25	3
5	WASHER	3	14	ADAPTOR	1	23	BEARING -0,00	1	32	BEARING +0.00	3
6	SCREW	1	15	WASHER	1	24	BEARING -0,25	1	33	BEARING +0.25	3
7	DRIVING GEAR ASSY	1	16	SCREW	6	25	BEARING -0,00	1	34	SHAFT BRACKET ASSY	3